



Column Block Installation Options

It is important, when installing free-standing columns that are independent of a retaining wall, that the foundation soils are properly prepared and compacted to achieve the required bearing capacity. Additionally, in areas that are susceptible to freeze thaw cycles it may be required to excavate to a depth beyond the frost line and backfill with concrete and/or a non-frost susceptible material.

Column Block with Fence Rails

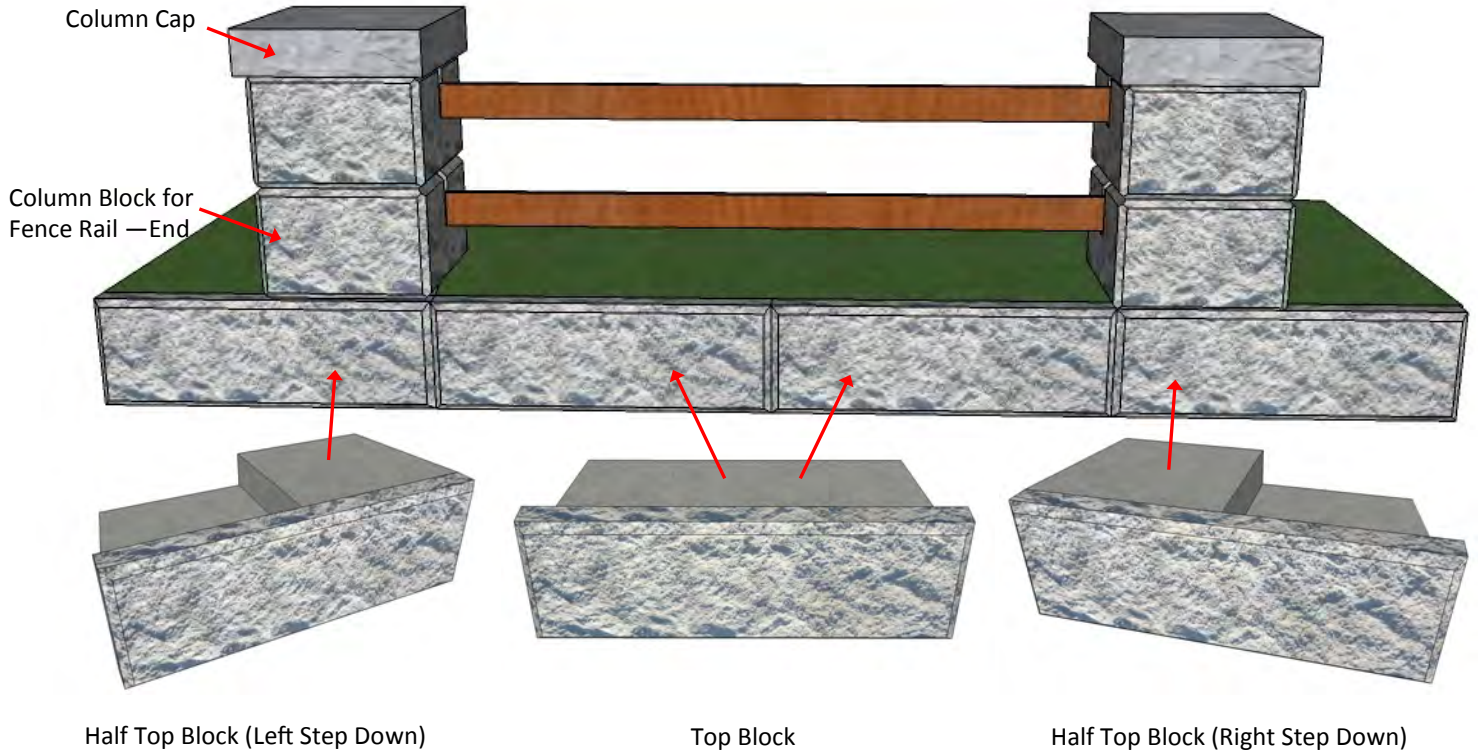


Size of Fence Rail Opening

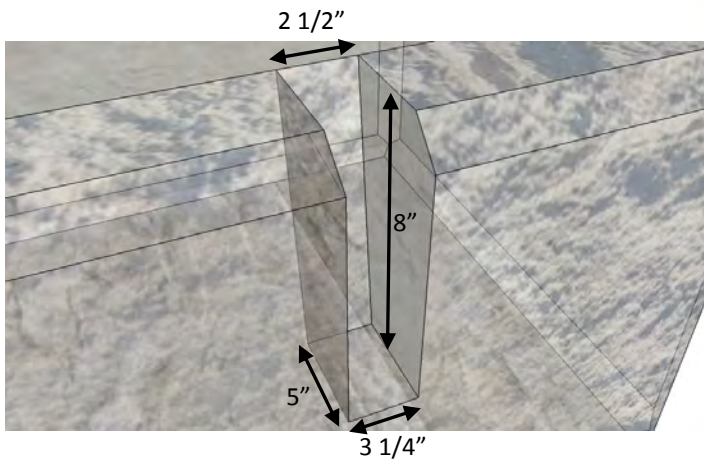

Rail: Wood, Concrete or Plastic
 2.5-inch max width
 4 to 8-inch height
 8-foot 6-inch or 6-foot 6-inch typical length
 (Results in opening between
 Columns being 8-feet or 6-feet)

Column Block with Gate

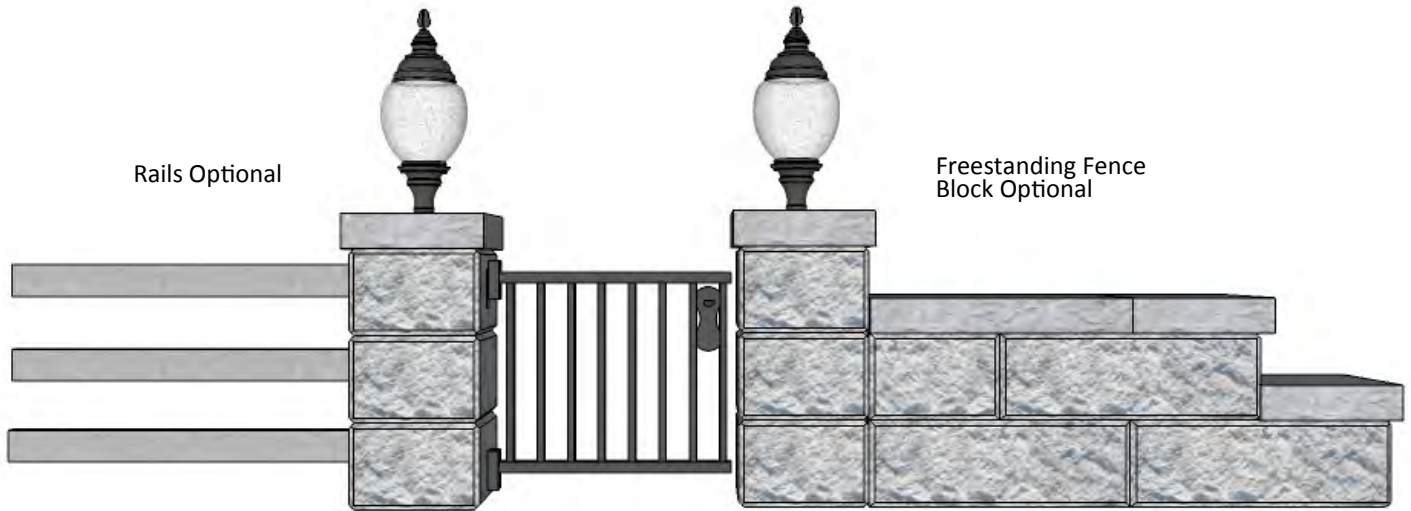

Column Block with Fence

